


DOUBLE DOOR MICRO-WAVE OVEN CABINET ASSEMBLY INSTRUCTIONS

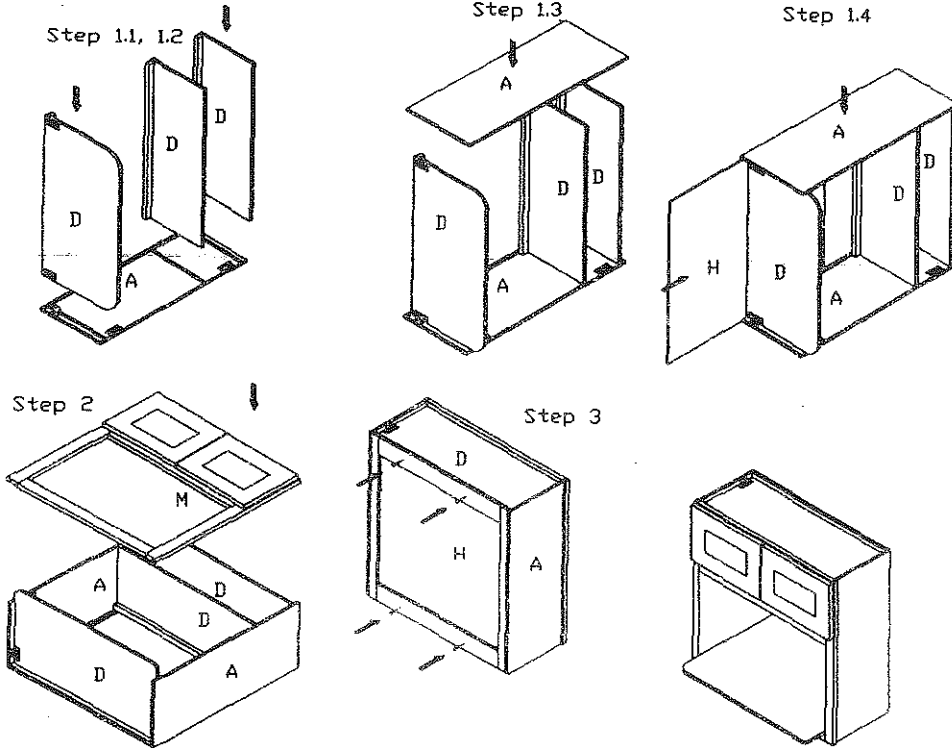

Step 1 -

1. Lay one cabinet Left/Right Side Panel (A) on a soft working surface with grooves facing upward. The grooves will be for the Top/Bottom (D).
2. Insert a Top/Bottom Panel (D) into the grooves on Side Panel (A) making sure clips are lined up and fully engaged. Insert locking screw into clip pair and tighten all screws.
3. Insert other Side Panel (A) into Top/Bottom Panel (D) making sure clips are lined up and fully engaged. Insert locking screw into each clip pair and tighten all screws.
4. Insert Back Panel (H) into grooves on Side Panel (A) making sure clips are lined up and fully engaged. Insert locking screw into clip pair and tighten all screws.

Step 2 -

1. Attach Front Face (M) onto Top/Bottom Panels (D) and Side Panels (A) making sure panels fit into the grooves of the Front Face (M) and clips are lined up and fully engaged. Insert locking screw into each clip pair and tighten all screws.

Step 3 -

1. From the back of the cabinet, screw the hanging rails for the Back Panel (H) into the Top/Bottom Panels (D).

PARTS LIST:		ITEM	QTY
	A	LEFT/RIGHT SIDE PANEL	2
	D	TOP/BOTTOM PANEL	3
	H	BLACK PANEL	1
	M	FRONT FACE	1



www.peakhomeproducts.com