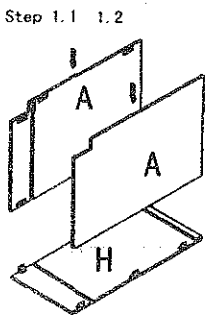

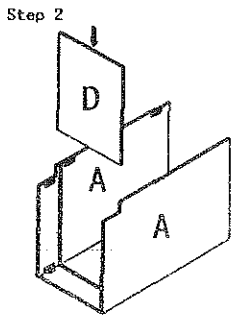

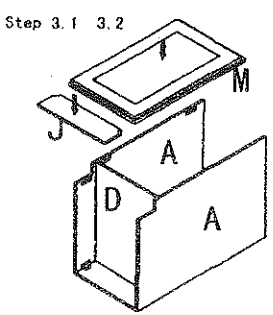

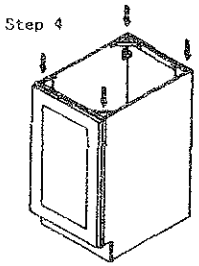

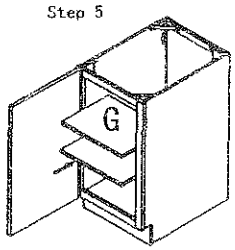

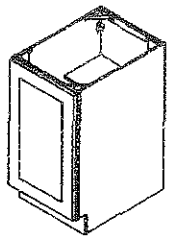

PARTS LIST:

	ITEM	QTY
A	RIGHT/LEFT SIDE PANEL	2
D	BOTTOM PANEL	1
H	BACK PANEL	1
M	FRONT FACE	1
J	TOE KICK PLATE	1
G	SHELF	2

SINGLE DOOR BASE CABINET ASSEMBLY INSTRUCTIONS

Step 1 -

1. Lay cabinet Back Panel (H) on a soft working surface with grooves facing upward. The grooves will be for the Bottom Panel (D).

2. Position the Left and Right Side Panels (A) to be flushed with the top of the Back Panel (H) making sure clips are lined up and fully engaged. Insert locking screw into each clip pair and tighten all screws.

Step 2 -

1. Insert Bottom Panel (D) into the grooves of Side Panels (A) and Back Panel (H)

Step 3 -

1. Attach Toe Kick Plate (J) to Side Panels (A) making sure clips are lined up and fully engaged. Insert locking screw into each clip pair and tighten all screws.

2. Attach Front Face (M) onto Bottom Panel (D) and Side Panels (A) making sure panels fit into the grooves of the Front Face (M) and clips are lined up and fully engaged. Insert locking screw into each clip pair and tighten all screws.

Step 4 -

1. Stand the cabinet upright, place each of the 4 plastic corner braces in each [illegible] corner of the cabinet, use screws to secure the braces to the panels.

Step 5 -

1. Insert shelf clips into the pre-drilled holes on the Side Panels (A) at desired height and slide in the Shelf (G) making sure the front edge faces out.

PEAK Home Products

www.peakhomeproducts.com